



Rev A: Install R2, R4 (10K)
 Rev B: Install R3, R4 (20K)

R1 is a spare resistor not used in either Rev A or Rev B.