


# UDB WITH DEFAULT RECEIVER AND SERVO CONNECTIONS

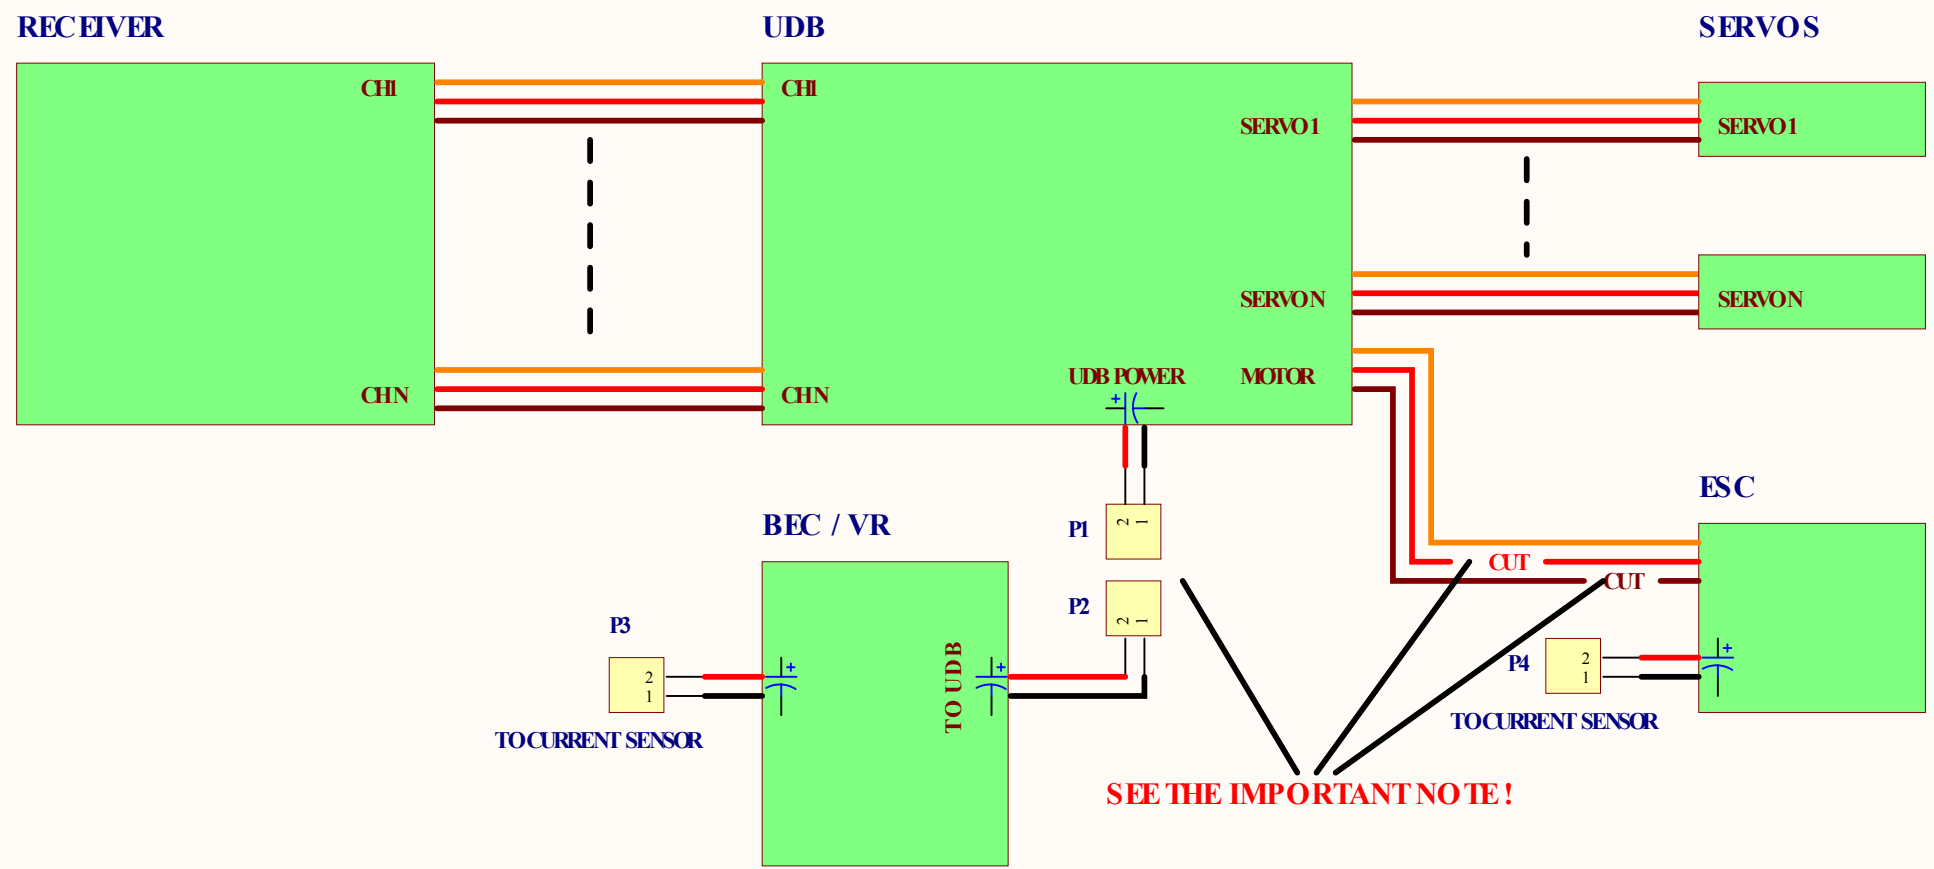

**SEE THE IMPORTANT NOTE!**

**IMPORTANT NOTE:**  
**DO NOT USE BOTH 5V POWER SUPPLIES FROM BEC and ESC ! JUST USE ONE OF THEM !**  
**WHEN USING BEC, JUST CUT THE RED AND BROWN WIRES OF THE ESC ( +Vcc and GND ) !**  
**WHEN USING OPTOISOLATED ESC, JUST USE IT AS IS!**  
**WHEN USING A FEW LOW POWER SERVOS, YOU DO NOT NEED BEC, JUST USE ONLY THE ESC AS IS, WITHOUT CUTTING ANY WIRE !**

Title		
Size	Number	Revision
A4		
Date:	15.06.2012	Sheet of
File:	C:\Users\...\PoweringUDB.SchDoc	Drawn By: