


DIY Visor for Aurora Cobra

The Web Guy
6 / 2022

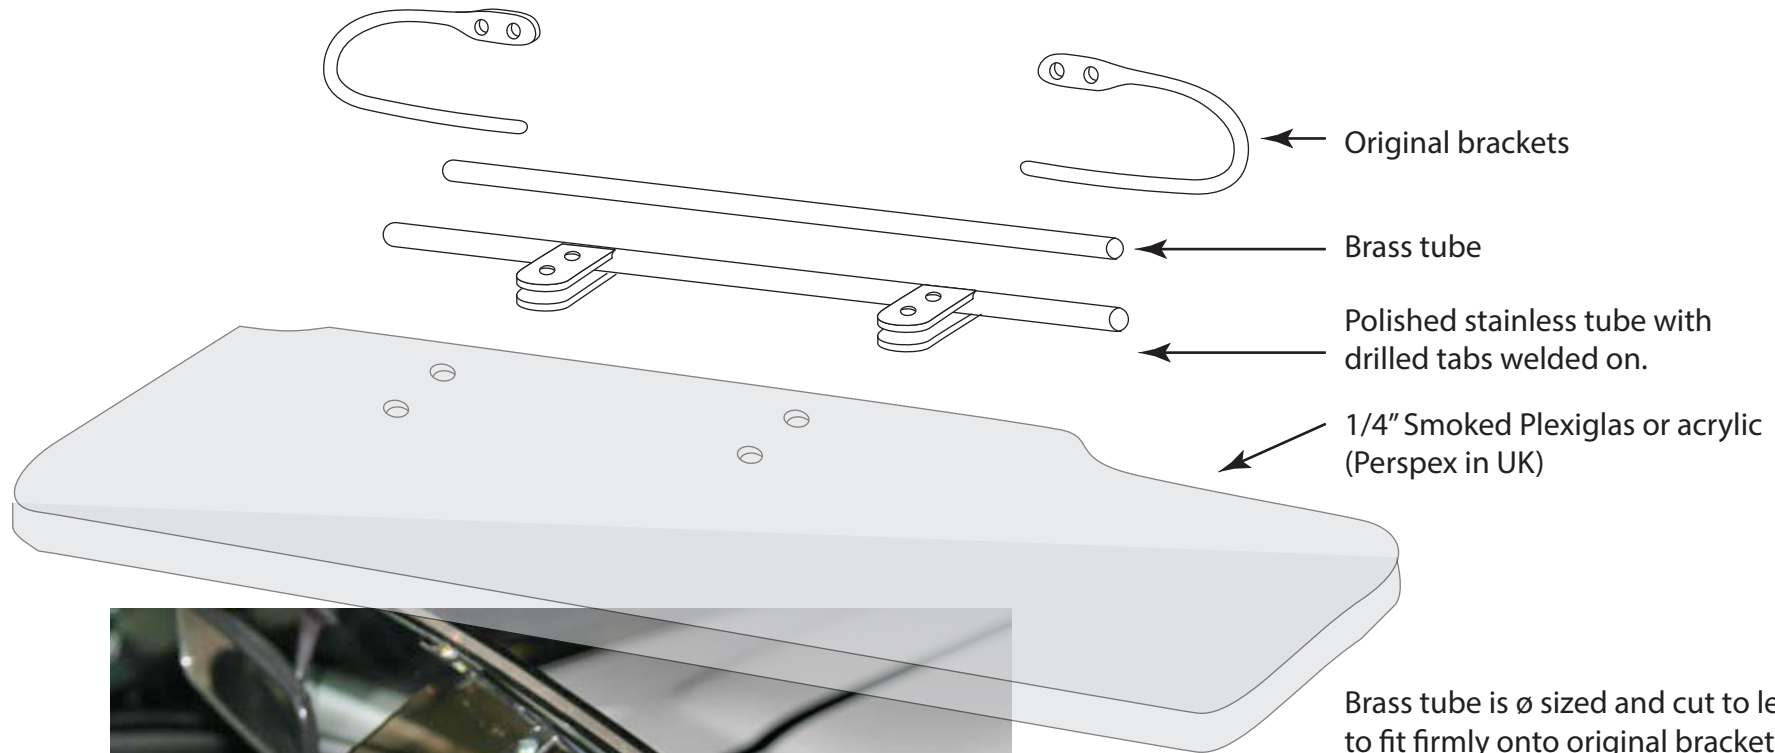

Brass tube is \emptyset sized and cut to length to fit firmly onto original brackets. Stainless tube is a close fit over the brass tube, which can be slightly bent to provide friction to retain position. A good welder can drill, fabricate and weld the tabs onto the stainless tube. Use screw/pocket nut from a stationery store to affix acrylic visor. Acrylic visor can be cut with a sabre saw to the same shape as original visor, edge polished or sanded.