


UDB WITH PWM -> PPM BOARD AND PPM -> PWM SERVO BOARD

RECEIVER OR PWM -> PPM BOARD

UDB

OPTOISOLATED PPM -> PWM SERVO BOARD

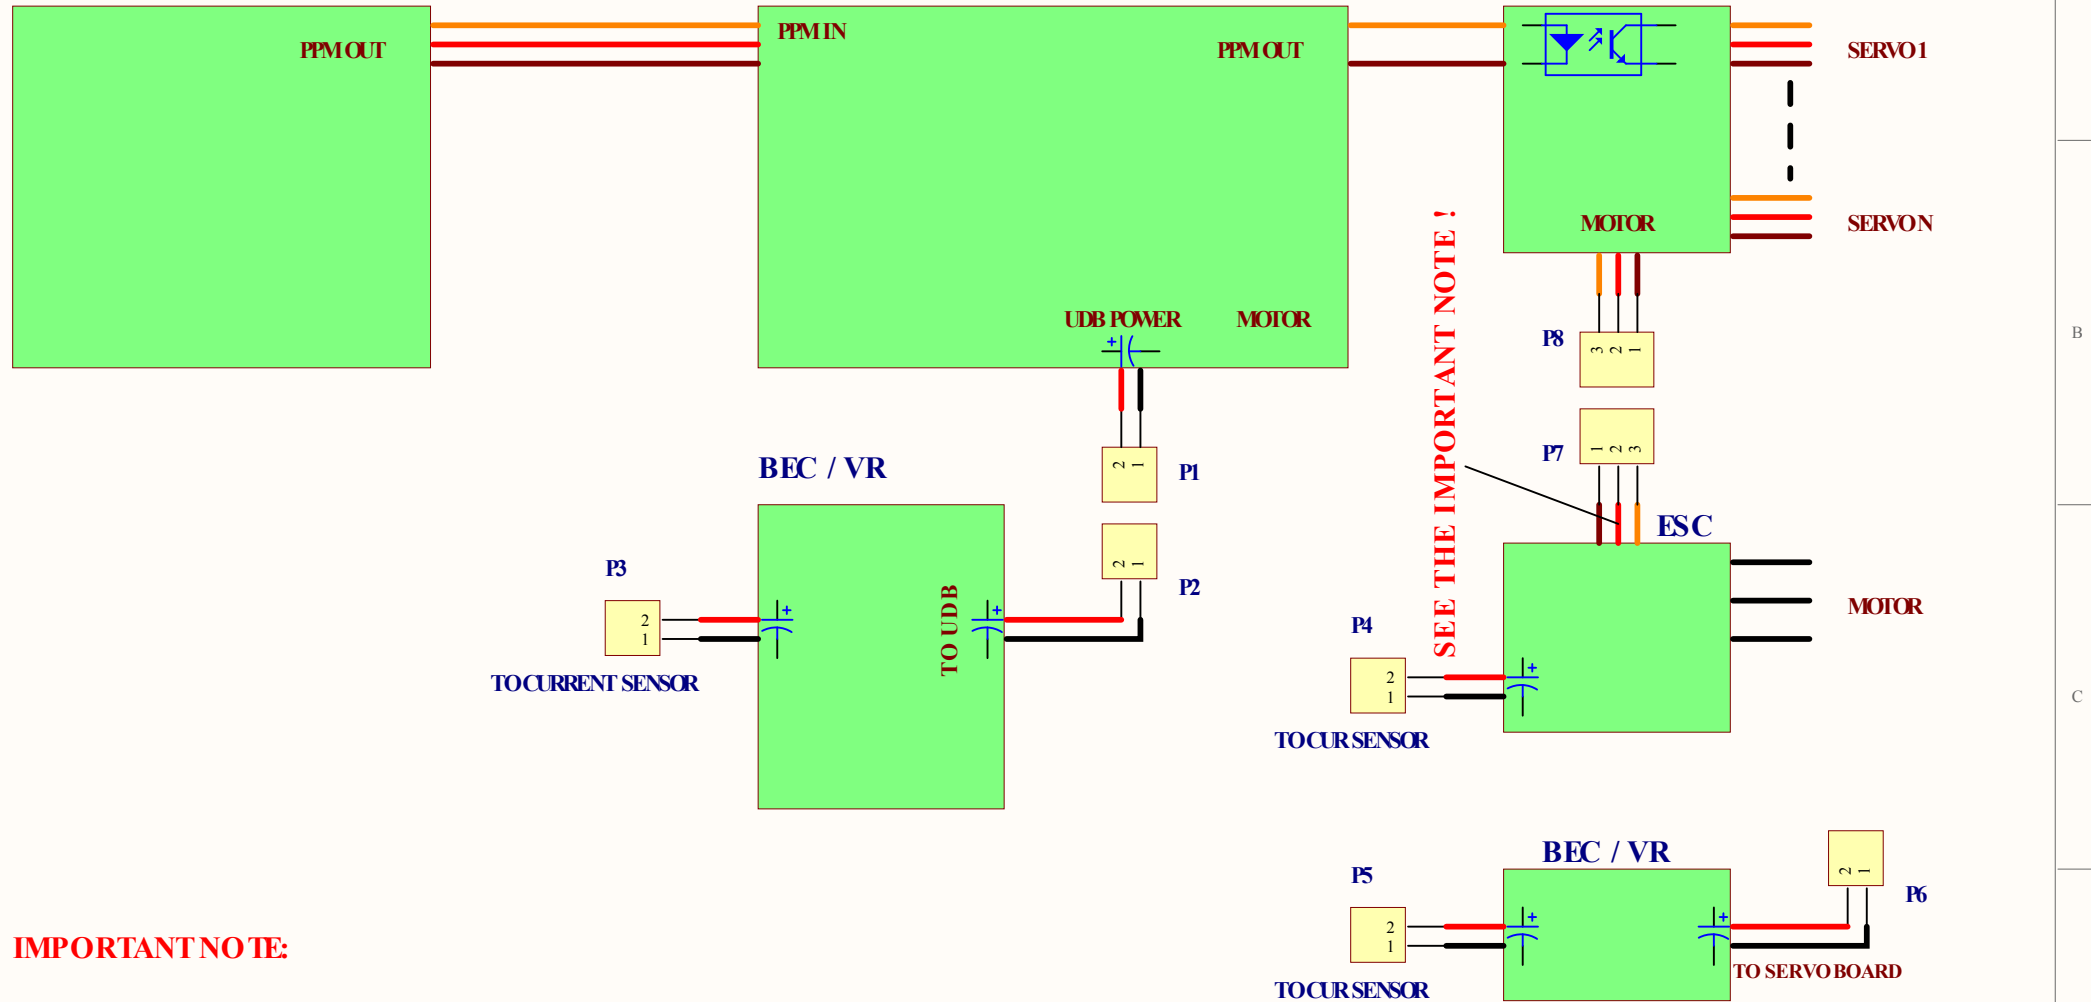

IMPORTANT NOTE:

WHEN USING A FEW LOW POWER SERVOS, YOU DO NOT NEED BEC, JUST USE ONLY THE ESC AS IS

WHEN USING BEC, JUST CUT THE RED (+5V) AND THE BROWN (GND) WIRES OF THE ESC !

WHEN USING OPTOISOLATED ESC, JUST USE IT AS IS BUT YOU'LL NEED ALSO THE BEC

Title		
Size	Number	Revision
A4		
Date:	15.06.2012	Sheet of
File:	C:\Users\...\PoweringUDB_PPM.SchDoc	Drawn By: